




5 Gallon Pail Valve

Instructions for usage

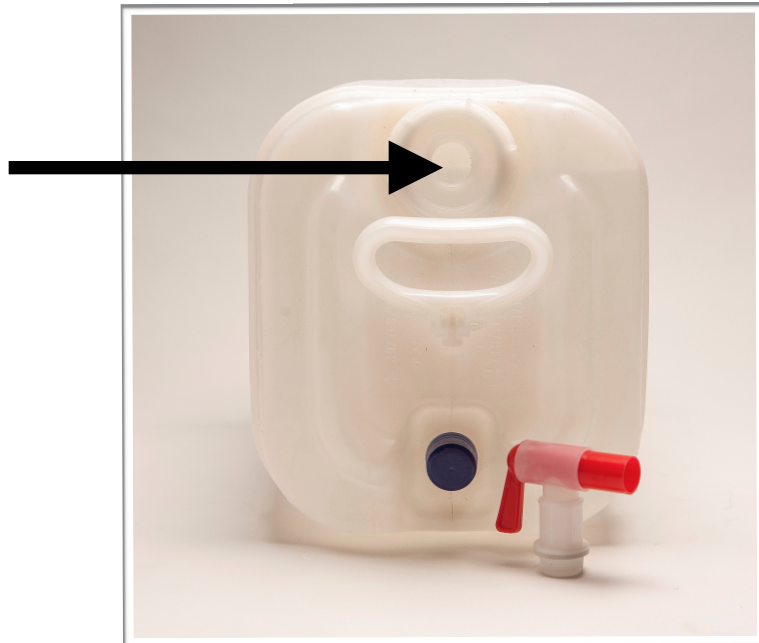

JIT Silicones Plus standard 5 gallon container for silicone fluids is a square closed-head natural high density polyethylene (HDPE) plastic container as pictured with approximate dimensions of: O.D.10.5 in. L x 9.25 in W x 15 in. H. This container is a robust design which allows simplified and mess-free dispensing of the fluid through the use of the high flow 3/4" no-spill valve.

Valve installation

To use the valve and dispense from the container, simply remove the larger circular lid. Next cut the center plastic from this lid using a sharp utility knife. (SEE ARROW IN PICTURE). Thread the valve into the lid tightly and replace onto container. Opening the smaller vent lid allows dispensing at a high, consistent flow rate.

JIT Silicones Plus

P.O. Box 24
Mars, PA 16046
www.jitsiliconesplus.com

Ph. 855-JIT-PLUS / 855-548-7587

Fax 888-530-3780

e-mail: info@jitsiliconesplus.com

WE ARE SILICONES... PLUS MORE!